


# 30L - Toxic Storage Cabinet

## SC0306

### Standard Features

- ✓ Double walled sheet steel construction with a 40mm thermic air barrier
- ✓ High capacity liquid tight sump to contain spills - 150mm deep
- ✓ Self-closing, close fitting doors held shut by catches at 2 points
- ✓ Built in flash arrestors and vent openings (for mechanical ventilation systems)
- ✓ Strong fully adjustable shelving perforated for free air movement, 100mm adjustment increments
- ✓ Sequential door closing system
- ✓ Stainless steel pin with continuous hinging for strength and reliability
- ✓ State of the art powder coat finish for high durability and performance
- ✓ Distinct safety signs and directions that comply with AS 1216 and AS 1319
- ✓ Designed and manufactured in full conformance to AS/NZS 4452:1997 - The storage and handling of toxic substances.
- ✓ Fully adjustable shelving

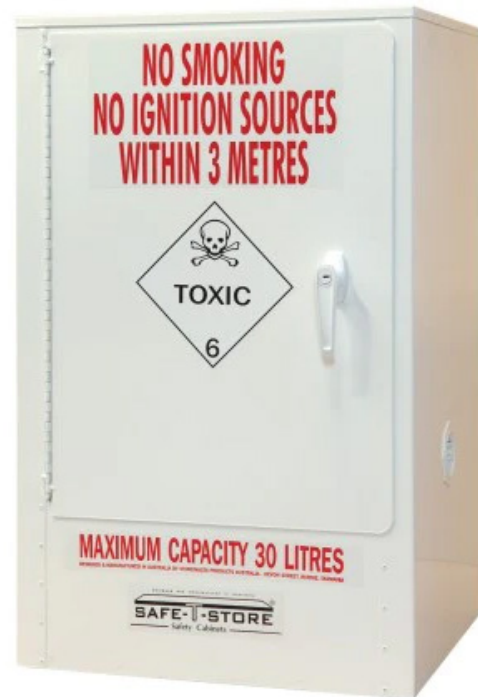

### SC0306 Specification

Dimensions (mm)			
	H	W	D
External	800	500	450
Internal	553	418	370

<b>Shelf Levels</b>	2
<b>Max Capacity</b>	30L
<b>Sump Capacity</b>	23L
<b>Weight (kg)</b>	33.0 kg

